



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Red		Red
	Green		Green
	Yellow		Yellow

 


 

 
 
 
 
 
 
 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Mute		Mute
	TXT		Text
	Aspect		Format
	Nicam	 + 	Shift + 3D
	Display		Info
	Sleep		Sleep
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Function		AV
	Menu		Menu
	Stop / Hold		Stop
	Play/Pause / Mix		Play
	Play/Pause / Mix		Pause
	DVD Menu / DTV/Radio		TV/R
	DVD Menu / DTV/Radio		D. Menu
	Subpage		Shift + Subt
	Media / Reveal		Media
	Angle / Index		3D
	Goto / Size		Smart
	Repeat / EPG		Guide
	Up / I<<< / List		Shift + Up
	A-B / FAV		Pre Ch
	Up / I<<< / List		List
	Up / I<<< / List		I<<<

Originalfernbedienung Ersatzfernbedienung

	Down / >>I		Shift + Down
	Down / >>I		>>I
	Right / >> / Page Up		Shift + Right
	Left / <<< / Page Down		Shift + Left
	Left / <<< / Page Down		<<<
	Right / >> / Page Up		>>>
	Setup		Options
	Language		Dual
	Title		Shift + Info
	Zoom / Still		Shift + Eject
	Subtitle		Subt
	Setup		Shift + Ok

