 

 


 


 
 





 




 

 

 

 

 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Goto		Smart
	Eject		Eject
	Setup		Options
	Title		List
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/FAV		0
	16:9 / Angle		Format


 
 




 

Originalfernbedienung Ersatzfernbedienung

	[O]/Repeat		Pre Ch
	Input		AV
	EPG/?/A-B		Guide
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Zoom		Shift + Eject
	Menu		Menu
	←		Back
	i		Info
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play/Pause		Play
	<<		<<
	Stop		Stop
	>>		>>
	l<<		l<<
	>>l		>>l
	[...] / Double		Subt
	Audio / Update		Dual
	TXT		Text

Originalfernbedienung Ersatzfernbedienung

