











 









 

 























 

 

 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Micro		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Home		Menu / Home
	≡		Setup / OPT /
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	▲		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Mute		Mute / Dimmer
	▼		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subt		Subtitle / EQ
	0		0
	TXT		Text / Goto
	prime video		Shift + Blue / Prime
	Netflix		Shift + Red / Netflix / Search



