













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Eject		Eject / Surround
	Intro		Smart / List
	Source		AV / Input / RDS
	Info		Info / Angle
	REP		Subtitle / EQ
	EQ		Shift + Subtitle / EQ
	<</ <<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+
	10-/Tun-		CH- / Page-
	10+/Tun+		CH+ / Page+
	Stop		Stop / Hold
	Fold-		Down
	Fold+		Up

Originalfernbedienung Ersatzfernbedienung

	PROG/Memory		Text / Goto
	Vol-		Vol-
	Vol+		Vol+
	Clock		Shift + Sleep / Timer
	Mute/Alarm		Mute / Dimmer

