





 

 













 



















Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	P-		CH- / Page-
	Down		Down
	i		Info / Angle
	Timer		Sleep / Timer
	TXT		Text / Goto
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Movies		AV / Input / RDS
	Green		Green / APP / Repeat
	Internet		Smart / List
	Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home
	Blue		Blue / Prime Video / Random
	Games		Zoom / Size
	- Color		<< / Tune-
	Colour +		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	- *		I<< / Preset-
	* +		>>I / Preset+
	E-Mail		Display / Media
	Wake Up		Subtitle / EQ
	Message		Setup / OPT /
	Bill View		Fav / Marker / PC
	Pay Accept		Guide / EPG / -/--
	Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

