

 
 














Originalfernbedienung Ersatzfernbedienung

	Power ON		Power
	Power OFF		Shift + Power
	Mute		Mute / Dimmer
	AVR		Eject / Surround
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 5
	VID 1 / VCR		Shift + 1
	VID 2 / TV		Guide / EPG / -/--
	VID 3 / CBL/SAT		Fav / Marker / PC
	VID 4		Shift + 4
	DIM		Shift + Mute / Dimmer
	AM / FM		TV/Radio /
	6/8 CH		Shift + 8
	PR + / Sleep		CH+ / Page+
	Test		Text / Goto
	Input		AV / Input / RDS





 
 

Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol+
	PR - / Surr		CH- / Page-
	Night		Sleep / Timer
	Vol -		Vol-
	CH		Shift + CH+ /
	Up		Up
	SPKR / Menu		Menu / Home
	Left		Left
	Set		Setup / OPT /
	Right		Right
	Digital		D.Menu / Top
	Down		Down
	Delay / Normal		Back / Return
	1		1
	2		2
	3		3
	4		4








Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	Tun-M	 + 	Shift + 6
	9		9
	0		0
	MEM		Smart / List
	Red / Tuning +		Red / Netflix / Search
	Red / Tuning +	 + 	Shift + Red / Netflix / Search
	Green / Direct		Green / APP / Repeat
	Yellow / Clear		Yellow / YouTube / Repeat
	Preset + / Blue		Blue / Prime Video / Random
	Preset + / Blue	 + 	Shift + Blue / Prime
	Tuning -	 + 	Shift + Vol-
	OSD		Display / Media
	RDS / D.Skip	 + 	Shift + AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Preset -		I<< / Preset-
	Dolby		Sound / Title
	DTS Surr.		Picture / Format
	DTS Neo 6	 + 	Shift + D.Menu / Top Menu
	Logic 7	 + 	Shift + 7
	Stereo		Audio / Lang I/II
	<<		<< / Tune-
	Play / Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

