



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------|--|------------------|
| | Tv | | TV/Radio / |
| | Power | | Power |
| | World | | Smart / List |
| | [≡]/Text | | Text / Goto |
| | Sleep | | Sleep / Timer |
| | Music/Movie/Phot | | Sound / Title |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Source/Games | | AV / Input / RDS |
| | 0 | | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | Recall | | Shift + Back / Return |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | Vol+ | | Vol+ |
| | Mute | | Mute / Dimmer |
| | PR+ | | CH+ / Page+ |
| | Vol- | | Vol- |
| | i | | Info / Angle |
| | PR- | | CH- / Page- |
| | Menu | | Menu / Home |
| | Up | | Up |
| | Q.Menu | | D.Menu / Top |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | [≡].. |  | Setup / OPT / |
|  | Lang |  | Audio / Lang I/II |
|  | O/* |  | Zoom / Size |
|  | Q./* |  | Picture / Format |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Rec |  | Rec / Rec Mode |
|  | Guide |  | Guide / EPG / -/-- |
|  | [-O-] |  | Display / Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

