 

 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Netflix	 + 	Shift + Red / Netflix /
	1	 1	1
	2	 2	2
	3	 3	3
	4	 4	4
	5	 5	5
	6	 6	6
	7	 7	7
	8	 8	8
	9	 9	9
	TV		TV/Radio /
	0	 0	0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	EXIT		Exit / Cancel / Clear
	World		Smart / List
	Camera/Music/Ph		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	Games		AV / Input / RDS



