 















 

 
 

 


 
 


 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[T]		Options
	Folder		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv Rec		3D
	[List]		Text
	Tv Play		TV/R
	[O]		Dual
	[I I]		Menu
	Back		Back
	i		Info
	[...]		Subt
	Up		Up
	Down		Down






 
 









 







 
 
 
 
 

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Windows		Media
	PR+		Ch +
	PR-		Ch -
	Rec		Rec
	Open/Close		Eject
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<		I<<
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	*		Guide
	#		Pre Ch
	Clear		Exit
	Enter		Smart

Originalfernbedienung Ersatzfernbedienung

