 


 
 
 
 

 
 
 
 


 
 


 
 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Q.View		Options
	Info		Info
	Input		AV
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAP		3D

Originalfernbedienung Ersatzfernbedienung

	P.Mode		Format
	OK		Ok
	-		Subt
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	CC		Text
	Sleep		Sleep
	S.Mode		Dual
	Guide		Guide
	ARC		TV/R



