










 




 



 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Shift + Guide
	Menu		Back
	Source		Menu
	Exit		AV
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Tv Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	S.M.		Smart
	P.M.		Media
	CH+		Ch +
	CH-		Ch -
	EPG Page Up		Shift + Up
	EPG Page Down		Shift + Down
	Sleep		Sleep
	P.G.		Format
	Aspect		3D





Originalfernbedienung Ersatzfernbedienung

	CH List		List
	EPG		Guide
	FAV		Pre Ch
	DTV Strenghth		D. Menu
	TV		TV/R
	AV		Eject
	HDMI		Text
	YPbPr		Shift + Format
	CC		Subt
	MTS/SAP		Dual
	VGA		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

