

 
 
 



 
 
 
 
 
 

 



 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	P.Mode		Format
	S.Mode		Shift + Dual
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Q.View		Options
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I/II/Audio		Dual
	P+		Ch +
	P-		Ch -
	Subtitle		Subt
	3D World		3D
	Info		Info
	FAV		Pre Ch
	Screen		Media
	CH List		List
	Menu		Menu
	Guide		Guide
	Back		Back
	Exit		Exit
	Up		Up





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Text		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec

