



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV / Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	HD / SD		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Back		Back / Return
	0		0

Originalfernbedienung Ersatzfernbedienung

	AV		AV / Input / RDS
	Vol+		Vol+
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	CH+		CH+ / Page+
	Vol-		Vol-
	Up		Up
	CH-		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Home		D.Menu / Top
	EPG		Guide / EPG / -/-
	List		Smart / List
	Fav		Fav / Marker / PC
	Dual Screen		Setup / OPT /





Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Red / Stop		Red / Netflix / Search
	Red / Stop		Stop / Hold
	Green /		Green / APP / Repeat
	Green /		Pause / Step / Freeze
	Green /		Play / Slow
	Yellow / <<<		<<< / Tune-
	Yellow / <<<		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	APP		Shift + Green / APP /
	Format		Picture / Format
	Timer		Sleep / Timer
	Audio ?		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

