



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Info		Info
	Dual I/II		Dual
	TV		TV/R
	Sleep		Sleep
	Sound		Shift + Dual
	Picture		Format
	Freeze		Pause
	Wide		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	0		0
	AVC		Media
	Vol +		Vol +
	Vol -		Vol -
	Prog +		Ch +
	Prog -		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Input		AV
	Menu		Menu
	Hold		Stop
	Recall		Back



