




 

 
 
 
 



 
 
 
 
 


 


 
 






Originalfernbedienung Ersatzfernbedienung


	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		3D
	Guide		Guide
	Menu		Menu
	Exit		Exit
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	OK		Ok
	Right		Right
	Left		Left
	Option		Options
	Return		Back
	Info		Info
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Subtitle		Subt
	List		List
	TV		TV/R
	O)/Lang		Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

