


**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Power		Power
	Sleep		Sleep
	Display		Shift + Info
	Mute		Mute
	AV/S/Scart		AV
	HDTV/PC/HDMI		Media
	Wide		Format
	Video Mode		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	0		0
	Shift + Guide		Shift + Guide
	Last		Back
	Sound		Dual
	Exit		Exit
	Teletext		Shift + Text
	Menu		Menu
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Zoom		Eject
	Surround		D. Menu
	Index		Options
	Subpage		Shift + Subt
	Guide		Guide



