
 






 
 

 

 



 





 
 

 





Originalfernbedienung Ersatzfernbedienung

 

 



 



 

 

 

 

 

 

 

 

 

	Standby		Power
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P.Mode		Shift + Sleep / Timer
	S.Mode		Shift + Audio / Lang I/II
	Freeze		TV/Radio /
	TXT		Setup / OPT /
	Mix/FAV List		Fav / Marker / PC
	Size		Sleep / Timer
	Subtitle		Subtitle / EQ
	Cancel/Audio		Audio / Lang I/II
	Record		Rec / Rec Mode
	<< / Index		>> / Tune+
	>> / Hold		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	I<< / Reveal		<< / Tune-
	>>I / Subpage		>>I / Preset+
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Down		Down
	Stop		Stop / Hold
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Tv/Radio		Zoom / Size				
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Display		Info / Angle				
	0		0				
	Recall		Back / Return				

