






 

 





 

 

 
 



 
 

 

 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Input |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Guide |  | Guide |
|  | Subtitle |  | Subt |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------|
|  | Blue |  | Blue |
|  | [≡] |  | Menu |
|  | TXT |  | Text |
|  | Back |  | Back |
|  | Home |  | Smart |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | CH.List |  | List |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |



