






 

 





 

 

 
 



 
 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	Subtitle		Subt
	Red		Red
	Green		Green
	Yellow		Yellow









 
 


 
 






Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	[≡]		Menu
	TXT		Text
	Back		Back
	Home		Smart
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH.List		List
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	Pause		Pause
	AudioOnly		Dual
	Stop		Stop
	Prime Video		Media
	You Tube		Shift + Media
	Netflix		Shift + Smart
	Rakuten Tv		TV/R

Originalfernbedienung Ersatzfernbedienung

