








 
 




 








 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	CH List		List
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	[≡]		Menu
	Play		Play
	Pause		Pause
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Info		Info
	TXT		Text
	Music		3D
	Free		Options
	ART		Dual
	Netflix		Shift + Media
	Prime Video		Format
	YouTube		Shift + Smart
	Rakuten TV		TV/R
	Media		Media
	[++]		D. Menu

Originalfernbedienung Ersatzfernbedienung

