


 



 



 











 

 

 
 
 








**Originalfernbedienung    Ersatzfernbedienung**

|                                                                                     |         |                                                                                     |                |
|-------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|----------------|
|    | Power   |    | Power          |
|    | D/A     |    | TV/R           |
|    | Source  |    | AV             |
|    | 1       |    | 1              |
|    | 2       |    | 2              |
|    | 3       |    | 3              |
|    | 4       |    | 4              |
|    | 5       |    | 5              |
|    | 6       |    | 6              |
|    | 7       |    | 7              |
|   | 8       |   | 8              |
|  | 9       |  | 9              |
|  | 0       |  | 0              |
|  | Last    |  | Pre Ch         |
|  | Info    |  | Info           |
|  | FAV     |  | Shift + Pre Ch |
|  | Picture |  | Shift + Format |

**Originalfernbedienung    Ersatzfernbedienung**

|                                                                                       |        |                                                                                       |              |
|---------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|--------------|
|    | Sound  |    | Shift + Dual |
|    | Vol +  |    | Vol +        |
|    | Vol -  |    | Vol -        |
|    | Mute   |    | Mute         |
|    | CH +   |    | Ch +         |
|    | CH -   |    | Ch -         |
|    | Menu   |    | Menu         |
|    | EPG    |    | Guide        |
|    | Up     |    | Up           |
|    | Down   |    | Down         |
|   | Right  |   | Right        |
|  | Left   |  | Left         |
|  | OK     |  | Ok           |
|  | I / II |  | Dual         |
|  | Still  |  | List         |
|  | Zoom   |  | Eject        |
|  | Exit   |  | Exit         |



 




**Originalfernbedienung Ersatzfernbedienung**

|                                                                                     |                      |                                                                                     |              |
|-------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------------|--------------|
|    | Radio / Browse       |    | Shift + TV/R |
|    | T.Shift / Rotate     |    | Shift + AV   |
|    | Audio / Page up      |    | Shift + Ch + |
|    | Audio / Page up      |    | Shift + Subt |
|    | Subtitle / Page down |    | Subt         |
|    | Subtitle / Page down |    | Shift + Ch - |
|    | D/EMP                |    | Smart        |
|    | Media / PVR          |    | Media        |
|    | Play / Pause         |    | Play         |
|    | Play / Pause         |    | Pause        |
|    | Stop                 |    | Stop         |
|  | Red / <<<            |  | Red          |
|  | Red / <<<            |  | <<<          |
|  | Green / >>>          |  | Green        |
|  | Green / >>>          |  | >>>          |
|  | Yellow / I<<<        |  | Yellow       |
|  | Yellow / I<<<        |  | I<<<         |

**Originalfernbedienung Ersatzfernbedienung**

|                                                                                     |              |                                                                                     |                 |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|-----------------|
|  | Blue / >>I   |  | Blue            |
|  | Blue / >>I   |  | >>I             |
|  | Text / Setup |  | Text            |
|  | Size         |  | Format          |
|  | Reveal       |  | Options         |
|  | Cancel       |  | Back            |
|  | Hold / Sleep |  | Sleep           |
|  | Index        |  | Shift + Info    |
|  | Sub.Code /   |  | 3D              |
|  | Mix          |  | Shift + Options |

