
















 

 














Originalfernbedienung Ersatzfernbedienung

|   |          |   |                           |
|---|----------|---|---------------------------|
|    | Power    |    | Power                     |
|    | Sleep    |    | Sleep / Timer             |
|    | Screen   |    | Picture / Format          |
|    | Presets  |    | Setup / OPT /             |
|    | ↔        |    | TV/Radio /                |
|    | FAV      |   | Shift + Fav / Marker / PC |
|    | Lang     |    | Audio / Lang I/II         |
|    | Subtitle |    | Subtitle / EQ             |
|    | TXT      |    | Text / Goto               |
|   | 1        |   | 1                         |
|  | 2        |  | 2                         |
|  | 3        |  | 3                         |
|  | 4        |  | 4                         |
|  | 5        |  | 5                         |
|  | 6        |  | 6                         |
|  | 7        |  | 7                         |
|  | 8        |  | 8                         |














 












 
 
 





Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                         |
|---|------------------|---|-------------------------|
|    | 9                |    | 9                       |
|    | EPG              |    | Guide / EPG / -/-       |
|    | 0                |    | 0                       |
|    | Swap             |    | Fav / Marker / PC       |
|    | Photo/Music/Movi |    | D.Menu / Top            |
|    | World            |    | Smart / List            |
|    | Source           |    | AV / Input / RDS        |
|    | Menu             |    | Menu / Home             |
|    | Up               |    | Up                      |
|   | Left             |   | Left                    |
|  | OK               |  | OK                      |
|  | Right            |  | Right                   |
|  | Down             |  | Down                    |
|  | C                |  | Exit / Cancel / Clear   |
|  | Disp.            |  | Display / Media         |
|  | Search Mode      |  | Shift + Red / Netflix / |
|  | Return           |  | Back / Return           |









Originalfernbedienung Ersatzfernbedienung

|   |                |   |                        |
|---|----------------|---|------------------------|
|    | CH+            |    | CH+ / Page+            |
|    | Info           |    | Info / Angle           |
|    | Vol+           |    | Vol+                   |
|    | CH-            |    | CH- / Page-            |
|    | Mute           |    | Mute / Dimmer          |
|    | Vol-           |    | Vol-                   |
|    | Rec            |    | Rec / Rec Mode         |
|    | Pause          |    | Pause / Step / Freeze  |
|    | I<<            |    | I<< / Preset-          |
|   | >>I            |   | >>I / Preset+          |
|  | <<             |  | << / Tune-             |
|  | Play           |  | Play / Slow            |
|  | Stop           |  | Stop / Hold            |
|  | >>             |  | >> / Tune+             |
|  | Red/↑/Zoom     |  | Red / Netflix / Search |
|  | Red/↑/Zoom     |  | Zoom / Size            |
|  | Green/↓/Repeat |  | Green / APP / Repeat   |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                             |
|---|-------------|---|-----------------------------|
|  | Yellow/Root |  | Yellow / YouTube / Repeat   |
|  | Blue/Title  |  | Blue / Prime Video / Random |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |
|   |             |   |                             |

