 


 
 



 


 




 
 
 




 

 
 


 
 
 


 
 



 
 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | POWER |  | Power |
|  | MUTE |  | Mute |
|  | MENU |  | Menu |
|  | ESC |  | Back |
| | MY BUTTON 1 |  | 1 |
| | MY BUTTON 2 |  | 2 |
|  | UP |  | Up |
|  | DOWN |  | Down |
|  | KEystone |  | 3D |
| | MY SOURCE / D. |  | AV |
|  | LEFT |  | Left |
| | SEARCH |  | TV/R |
|  | BLANK |  | Subt |
|  | RIGHT |  | Right |
|  | ASPECT |  | Format |
| | VOL+ |  | Vol + |
| | VOL- |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|--|-------|
|  | PAGE UP |  | Ch + |
|  | PAGE DOWN |  | Ch - |
|  | MAGNIFY ON |  | Smart |
|  | MAGNIFY OFF |  | Media |
|  | ENTER |  | Ok |
|  | RESET |  | Exit |
|  | FREEZE |  | Pause |
|  | POSITION |  | List |
|  | AUTO |  | Dual |
|  | VIDEO |  | Red |
| | COMPUTER |  | Green |

