


 











 





 

 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Nicam		Smart

Originalfernbedienung Ersatzfernbedienung

	Auto		Media
	Display		Shift + Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	LCD Menu		Menu
	DVB Menu		D. Menu
	Input		AV
	P.Mode		Format
	S.Mode		Shift + Options
	Sleep		Sleep
	Info		Info
	FAV		Pre Ch



