 
 



 





 









 

 









 

 


 




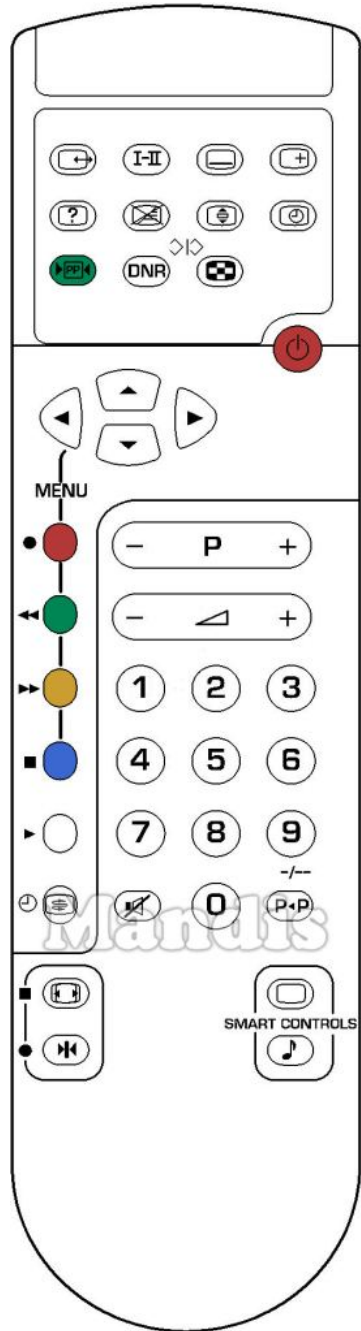 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	>>>	 + 	Shift + Menu
	Source		AV
	I - II		Dual
	Subtitles		Subt
	[i+]		Info
	[?]		D. Menu
	Mix		TV/R
	Zoom		Eject
	Time	 + 	Shift + AV
	[PP]		Back
	DNR		Options
	Mosaic		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

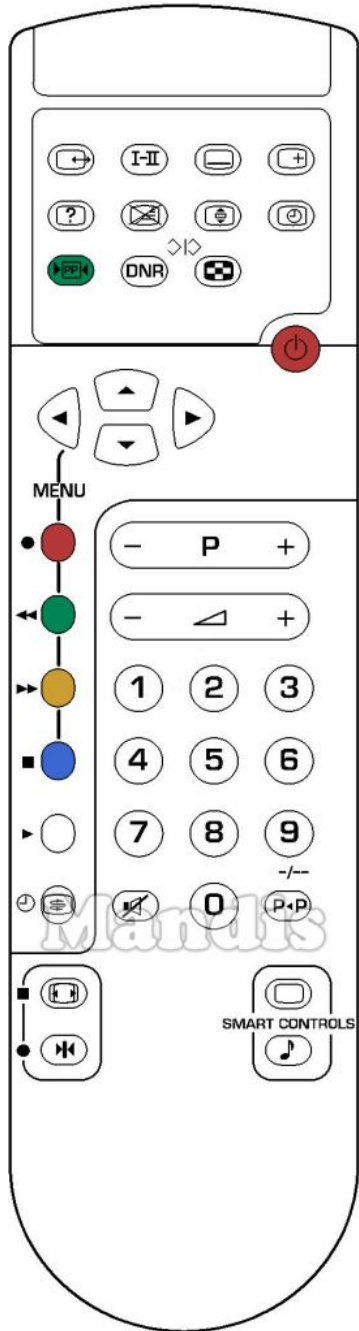 
	Red / Menu		Red
	Red / Menu	 + 	Shift + Format
	Green / Menu		Green
	Green / Menu	 + 	Shift + Dual
	Yellow / Other		Yellow
	Yellow / Other		Menu
	Blue / OK		Blue
	Blue / OK		Ok
	Special Audio	 + 	Shift + Subt
	Text		Text
	P -		Ch -
	P +		Ch +
	Vol -		Vol -
	Vol +		Vol +
	1		1
	2		2
	3		3





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	P < P		Pre Ch
	Format		Format
	Freeze		Pause
	Smart Controls Picture		Smart
	Smart Controls Audio		Media




 








 


 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P+		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

