 

 

 



 









 



 



 






Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Portal		D.Menu / Top
	0		0
	Menu		Menu / Home
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold



 






 

 

 

 

 



 

 

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down

 

 





Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Vol+		Vol+
	List		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	i		Info / Angle
	P-		CH- / Page-
	OPT+		Setup / OPT /
	Audio		Audio / Lang I/II
	Sub		Subtitle / EQ
	Tv/Radio		TV/Radio /
	Text		Text / Goto
	[+ ≡]		Shift + Fav / Marker / PC
	[≡ ≡]		Fav / Marker / PC
	I>		Shift + Play /
	Source		AV / Input / RDS
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	V-Format		Picture / Format
	Wide		Zoom / Size

