




 
 
 

 




 


 














 












 











 
 

 







 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Mute		Mute
	Source		AV



 
 









 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Red		Red
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<

 




 
 

 
 
 
 
 





 
 
 


 

 






Originalfernbedienung Ersatzfernbedienung

	>>		>>
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Exit		Exit
	i		Info
	CH+		Ch +
	CH-		Ch -

 

 
 

 


 
 









 

 
 

 


 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	OK/List		Ok
	Guide		Guide
	Media		Media
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Up		Up
	Exit		Exit
	Last		Back
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Stop		Stop
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	<<		<<
	>>		>>
	Sleep		Sleep
	Source		AV
	Wide		Format
	V-Format	+	Shift + Format
	OPT+		Options
	Edit		Eject
	Teletext		Text
	Tv/Radio		TV/R
	[...]		Subt
	[+≡]		D. Menu
	?		Smart
	>	+	Shift + Pause
	<<		<<
	[≡ ≡]		List





 














 


 

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	>>		>>



 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	<<		<<
	>>		>>
	Guide		Guide
	OK/List		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Exit		Exit
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

