




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Pre Pg		Pre Ch
	V.Size		Eject
	Favourite		Shift + Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Input / TV/Video		TV/R

Originalfernbedienung Ersatzfernbedienung

	Menu / Set		Menu
	Menu / Set		Ok
	Exit		Exit
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	PG+		Ch +
	PG-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	MTS		Media
	PG Info		Info
	Picture		Format
	Still		Pause
	Sound		Dual
	Sleep		Sleep



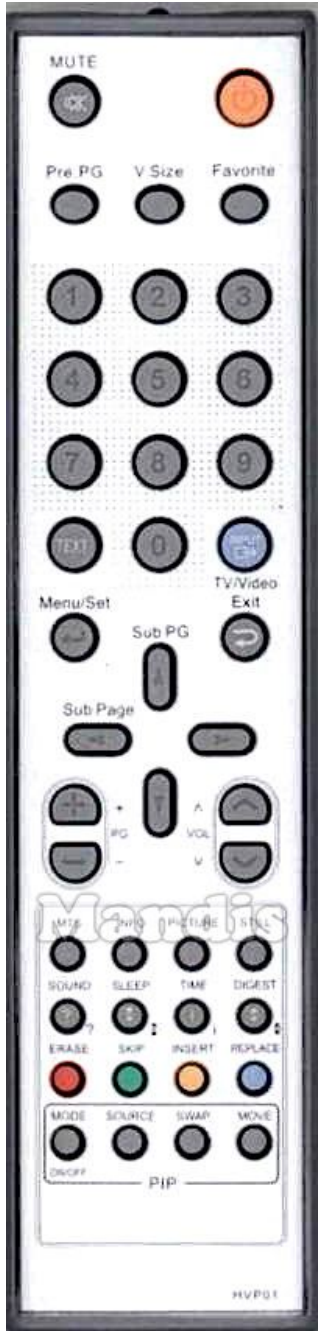

Originalfernbedienung Ersatzfernbedienung

TIME	Time	TIMER	AV
DIGEST	Bright	SETTINGS	OPT
ERASE	Red / Erase	A	Red
SKIP	Green / Skip	B	Green
INSERT	Yellow / Insert	C	Yellow
REPLACE	Blue / Replace	D	Blue
MODE	PIP On/Off	SHIFT + A	Shift + Red
SOURCE	PIP Source	SHIFT + B	Shift + Green
SWAP	PIP Swap	SHIFT + C	Shift + Yellow
MOVE	PIP Move	SHIFT + D	Shift + Blue

Originalfernbedienung Ersatzfernbedienung

