



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PR Edit		Guide
	PRE PR		Pre Ch
	Sound		Dual
	Picture		Shift + Format
	Aspect		3D

Originalfernbedienung Ersatzfernbedienung

	Pause/Still		Pause
	S.Mode		Shift + Dual
	PIP		Smart
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	PIP/Source		Media
	[≡+]/Size		Eject
	Position		Subt
	Menu		Menu
	Source		AV
	Swap		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left



