



## Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Info		Info

## Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	↑		>>
	↓		<<
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	TXT		Text
	[...]		Subt
	Audio L/R		Smart
	[+]		3D
	FAV		Pre Ch
	UHF		Media
	PAL/NTSC		Format
	Tv/AV		AV

Originalfernbedienung Ersatzfernbedienung




 


 

 

 






 

 

 
 
 

 
 
 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up/PR+		Up
	Down/PR-		Down
	OK/List		Ok
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	↑		Ch +
	↓		Ch -
	Pause		Pause
	[+]		3D
	FAV		Pre Ch
	UHF		Smart
	PAL/NTSC		Format
	TV/AV		AV
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	TXT		Text
	[...]		Subt
	Audio L/R	+	Shift + Dual

Originalfernbedienung Ersatzfernbedienung