
 

 

 













 
 
 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Subt		Subt
	Audio		Dual





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TXT		Text				
	Zoom		Eject				
	Play/Pause		Play				
	Stop		Stop				
	I>/Slow		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				

