
 
 
 
 
 

 
 
 
 
 

 
 

 
 
 

 
 
 






 
 

 
 



 






 
 
 
 


 



 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Pause	
Subt.List		Subt	
Reveal		Play	
Sleep Timer		Sleep	
Txt Stop		Stop	
Return TV		TV/R	
Info		Info	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
Display		Shift + Info	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Menu audio		Dual	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung



8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Mix Scan	 + 	Shift + Media
Off/Tim	 + 	Shift + List
Bright+ Mode		Options
On/Tim		List
Color+ P.Std		Format
Aft/Caf	 + 	Shift + Smart
Rotate Text	 + 	Shift + Format
Tone-		I<<
Audio-	 + 	Shift + Vol -
Store		Smart
Audio+	 + 	Shift + Vol +
Color- S.Std	 + 	Shift + Dual

Originalfernbedienung Ersatzfernbedienung

Tune-		<<
Red		Red
Tune+		>>
Green		Green
Yellow		Yellow
Tone+		>>I
Blue		Blue
Store Text	 + 	Shift + Text
AV 2	 + 	Shift + AV
Browse		Media
Search	 + 	Shift + TV/R
Disp		3D
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Originalfernbedienung Ersatzfernbedienung

Level R/Woofer	 +  Shift + Blue

Originalfernbedienung Ersatzfernbedienung

