

 
 

 
 
 
 
 
 

 
 

 

 

 

 

 

 

 
 
 
 
 







 

 





 


 



 

 
 
 
 

 



 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Rec		Rec
	Time Shift		Sleep
	Rec List		List
	Timer		AV
	TV System		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Copy		Pre Ch
	Goto		Shift + Guide
	<<		<<
	>>		>>
	Vol -		Vol -
	Vol +		Vol +
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Home		Smart
	Return		Back
	Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Info		Info
	Setup		Options
	Menu		Menu
	Pause / Step		Pause
	Slow		Shift + Play
	Music		Dual
	A-B		Format
	Subtitle		Subt
	Repeat		Shift + Text
	Audio		Shift + Dual
	Red		Red
	Green		Green
	EPG		Guide
	Yellow		Yellow
	TTX		Text
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung