




 

 





 

 

 

 









 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/R		TV/R
	TTX		Text
	Sub.T		Subt
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	SAT		Smart


 
 
 



 




 


 


 



 
 

 

 




Originalfernbedienung Ersatzfernbedienung

	Find		Media
	M/P		D. Menu
	Tv/AV		AV
	Exit		Exit
	Menu		Menu
	Audio		Dual
	FAV		Pre Ch
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	DEV		Options
	Up		Up
	OK		Ok
	Down		Down
	Right		Right







Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Red/Recall		Red
	Green/Info		Green
	Yellow/Zoom		Yellow
	Blue/Option		Blue
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	I<<		I<<
	>>I		>>I
	Goto		List
	Rec		Rec
	i+		Info
	Aspect		Format
	P+		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Shift + Ch -

