







 

 


 












**Originalfernbedienung Ersatzfernbedienung**

	Open/Close		Eject / Surround
	V.Mode		Picture / Format
	Power		Power
	OSD		Display / Media
	Subtitle		Subtitle / EQ
	Title		Sound / Title
	Menu		Menu / Home
	Repeat		Green / APP / Repeat
	1		1
	2		2
	3		3
	A-B RPT		Yellow / YouTube / Repeat
	4		4
	5		5
	6		6
	Prog		TV/Radio /
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	Intro		AV / Input / RDS
	Search		Red / Netflix / Search
	0		0
	10+		Guide / EPG / -/-
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Up		Up
	Left		Left
	Enter/Play		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Stop		Stop / Hold
	<</F.REV		<< / Tune-
	>>/F.FWD		>> / Tune+



