












 
 

 





















 
















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Power |  | Power |
|  | Info |  | Info / Angle |
|  | Sleep |  | Sleep / Timer |
|  | Tv/R |  | TV/Radio / |
|  | AUX |  | Shift + 7 |
|  | EPG |  | Guide / EPG / -/-- |
|  | Audio |  | Audio / Lang I/II |
|  | Red/Text |  | Shift + Red / Netflix / |
|  | Green/Recall |  | Shift + Green / APP / |
|  | Yellow/Games |  | Shift + Yellow / YouTube / |
|  | Blue/Audio |  | Blue / Prime Video / Random |
|  | Exit |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | FAV >> |  | >> / Tune+ |
|  | << FAV |  | << / Tune- |
|  | Up |  | Up |
|  | OK |  | OK |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Down |  | Down |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Left |  | Left |
|  | Pause |  | Pause / Step / Freeze |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |



