 
 
 
 
 
 







 

 

 



 







 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Power |  | Power |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | TV |  | TV/R |
|  | Mute |  | Mute |
|  | >>< |  | Smart |
|  | ... |  | Media |
|  | ▲ |  | Up |
|  | ▲ |  | Ch + |
|  | ▼ |  | Down |
|  | ▼ |  | Ch - |
|  | ← |  | Left |
|  | ← |  | Vol - |
|  | → |  | Right |
|  | → |  | Vol + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------------|
|  | □ |  | Ok |
|  | □ |  | Menu |
|  | TXT |  | Text |
|  | [] |  | Stop |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | [/ =] |  | Shift + Text |
|  | Cancel |  | Exit |
|  | [↑ ↓] |  | 3D |



