 

 
 
 
 
 

 

 

 

 

 

 
 
 
 
 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	.		Guide
	Recall		Pre Ch
	Enter		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Menu		Menu
	Exit		Exit
	Home		Smart
	Info		Info
	Favorite		Shift + Pre Ch
	Mute		Mute
	Input		AV
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Picture		Format
	Zoom		Eject
	Audio		Shift + Dual
	CCD		Subt





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	MTS/SAP		Dual
	CH List		List
	Sleep		Sleep
	Video		Red
	HDMI		Green
	ACC		Yellow

