




















 


 





















 

 



 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Back		Back / Return
	*		Setup / OPT /
	Home		Menu / Home
	Browser		D.Menu / Top
	Up		Up
	Play/Pause		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Open/Close		Eject / Surround
	Search		Red / Netflix / Search
	Left		Left
	OK		OK
	Right		Right
	Stop		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Down		Down
	Info		Info / Angle
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	FN		Text / Goto
	Caps Lock		AV / Input / RDS
	Movie		Subtitle / EQ
	Photo		Picture / Format
	Music		Sound / Title
	Shift		Blue / Prime Video / Random

