


 
 
 
 
 
 
 

 
 






 




 



 





 


 

 


 
 
 
 

 




 
 






 











Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	DVD / USB		3D
	HDMI		Format
	TV		TV/R
	LOAD		Options
	AUDIO		AV
	VIDEO		Eject
	RADIO		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	INFO		Info
	SURR		Back
	SETUP		D. Menu
	SOUND		Dual
	MENU		Menu
	UP		Up
	RIGHT		Right
	DOWN		Down
	LEFT		Left
	OK		Ok
	VOL -		Vol -
	VOL +		Vol +
	MUTE		Mute
	I<<		I<<
	>>I		>>I
	STOP		Stop





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	PLAY		Play
	PAUSE		Pause
	SHUFF		Smart
	SUB-T		Subt
	LANG		Media

Originalfernbedienung Ersatzfernbedienung

