



**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                        |
|---|------------|---|------------------------|
|    | Standby    |    | Power                  |
|    | USB/Card   |    | Shift + 8              |
|    | Open/Close |    | Eject / Surround       |
|    | Audio      |    | Audio / Lang I/II      |
|    | Subtitle   |    | Subtitle / EQ          |
|    | Search     |    | Red / Netflix / Search |
|    | 1          |    | 1                      |
|    | 2          |    | 2                      |
|    | 3          |    | 3                      |
|    | 4          |    | 4                      |
|   | 5          |   | 5                      |
|  | 6          |  | 6                      |
|  | 7          |  | 7                      |
|  | 8          |  | 8                      |
|  | 9          |  | 9                      |
|  | Clear      |  | Exit / Cancel / Clear  |
|  | 0/10       |  | 0                      |

**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Menu       |    | Menu / Home           |
|    | Setup      |    | Setup / OPT /         |
|    | Display    |    | Display / Media       |
|    | Title      |    | Sound / Title         |
|    | Left       |    | Left                  |
|    | Up         |    | Up                    |
|    | Right      |    | Right                 |
|    | Enter      |    | OK                    |
|    | Down       |    | Down                  |
|    | <<         |    | << / Tune-            |
|   | >>         |   | >> / Tune+            |
|  | I<<        |  | I<< / Preset-         |
|  | >>I        |  | >>I / Preset+         |
|  | Step       |  | Pause / Step / Freeze |
|  | Stop       |  | Stop / Hold           |
|  | Play/Pause |  | Play / Slow           |
|  | Vol+       |  | Vol+                  |





**Originalfernbedienung    Ersatzfernbedienung**

|  |         |   |                           |
|--|---------|---|---------------------------|
|  | Repeat  |   | Green / APP / Repeat      |
|  | A-B     |   | Yellow / YouTube / Repeat |
|  | Angle   |   | Info / Angle              |
|  | Mute    |   | Mute / Dimmer             |
|  | Vol-    |   | Vol-                      |
|  | L/R     |   | AV / Input / RDS          |
|  | N/P     |   | Text / Goto               |
|  | PBC     |   | Smart / List              |
|  | Slow    | + | Shift + Play /            |
|  | V-Mode  |   | D.Menu / Top              |
|  | Return  |   | Back / Return             |
|  | HD/Res. |   | Picture / Format          |
|  | Program |   | TV/Radio /                |
|  | Zoom    |   | Zoom / Size               |
|  |         |   |                           |
|  |         |   |                           |
|  |         |   |                           |
|  |         |   |                           |
|  |         |   |                           |

**Originalfernbedienung    Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

