 





 

 
 
 

 

 


 
 





 

 
 

 








 
 


 




 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Power TV		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	≥10		Pre Ch
	Tv/Video		TV/R
	Title/Group		D. Menu
	Repeat		Text

Originalfernbedienung Ersatzfernbedienung

 
 





 
 




 
 






 
 



 

 
 



 

	A-B RPT		Shift + 2
	Sleep		Sleep
	Top Menu		Shift + Menu
	Dimmer		Smart
	Menu PL		Menu
	FL Display		Shift + Info
	Setting		Options
	On Screen		3D
	PTY Search		Shift + Up
	Display		Info
	Set Up		Shift + Options
	TA/News/Info		Shift + Down
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok




Originalfernbedienung Ersatzfernbedienung

	+ PTY	 + 	Shift + Right
	- PTY	 + 	Shift + Left
	Play DVD		Play
	Play USB		List
	FM/AM	 + 	Shift + TV/R
	Stop / Memory		Stop
	TV Sound	 + 	Shift + Dual
	Pause/FM Mode		Pause
	I<< / Tuning-		I<<
	>>I / Tuning+		>>I
	Surround		Media
	<< / Slow-		<<
	>> / Slow+		>>
	Back		Back
	Return	 + 	Shift + Back
	Subtitle		Subt
	SPK-Level		Red

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Angle		Format
	Zoom		Eject
	VFP/Scan Mode		Green
	Play Mode	 + 	Shift + Play
	Level+		Ch +
	Level-		Ch -
	Tv CH+	 + 	Shift + Ch -
	Tv CH-	 + 	Shift + Ch +
	Cancel		Exit
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	TV Vol+	 + 	Shift + Vol -
	Tv Vol-	 + 	Shift + Vol +
	Muting		Mute

