 




 

 


 
 
 
 
 
 
 
 
 



 
 

 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Home		Smart
	[G]		Guide
	i		Info
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	*1		Format
	Prime video		Media
	Netflix		Shift + Media
	YouTube		Shift + Smart
	<<		<<



