
 



 

 

 

 



 

 



 






 
 

 



 

 

 

 

 
 
 
 

 


 
 


 
 
 
 


 

 

 

 





 



 

 



 

 



 







 

 





 



 



 

 

 

 

 

 

 

 





 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	O)/I/I		Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	^/[+]		Format
	Play/[?]		Play
	>>/[◆]		>>


 




























 



 


 
 
 
 

 
 
 


 
 

 


 
 
 



 

 
 
 
 
 
 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O)/I/II		Dual
	[≡]		Text
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[◆]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Green/(↔)
	Mute		Yellow
	1		Blue/Picture
	2		OK
	3		Up
	4		Down
	5		Right
	6		Left
	7		P+
	8		P-
	9		Vol+
	0		Vol-
	i		<<
	AV		Play/[?]
	O)/I/II		>>/[◆]
	Menu		Stop/[X]
	Red/Zoom		Pause/[≡i]
	Red		Green
	Mute		Yellow
	1		Blue
	2		Ok
	3		Up
	4		Down
	5		Right
	6		Left
	7		Ch +
	8		Ch -
	9		Vol +
	0		Vol -
	Info		<<
	AV		Play
	Dual		>>
	Menu		Stop
	Red		Pause



