


**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |              |
|---|--------------|---|--------------|
|    | Standby / On |    | Power        |
|    | Open / Close |    | Eject        |
|    | 1            |    | 1            |
|    | 2            |    | 2            |
|    | 3            |    | 3            |
|    | 4            |    | 4            |
|    | 5            |    | 5            |
|    | 6            |    | 6            |
|    | 7            |    | 7            |
|    | 8            |    | 8            |
|    | 9            |    | 9            |
|   | 0            |   | 0            |
|  | 10           |  | Pre Ch       |
|  | +10          |  | Guide        |
|  | Return       |  | Back         |
|  | Cancel       |  | Exit         |
|  | Top Menu     |  | Shift + Menu |

**Originalfernbedienung Ersatzfernbedienung**

|   |                |   |              |
|---|----------------|---|--------------|
|    | Menu           |    | Menu         |
|    | Up             |    | Up           |
|    | Right          |    | Right        |
|    | Down           |    | Down         |
|    | Left           |    | Left         |
|    | Enter          |    | Ok           |
|    | Choice         |    | Media        |
|    | Display        |    | Info         |
|    | I<< Previous   |    | I<<          |
|    | >>I Next       |    | >>I          |
|    | Stop / Clear   |    | Stop         |
|   | Play / Select  |   | Play         |
|  | Pause / Strobe |  | Pause        |
|  | << / Slow -    |  | <<           |
|  | >> / Slow +    |  | >>           |
|  | Play Mode      |  | Shift + Play |
|  | Subtitle       |  | Subt         |





Originalfernbedienung Ersatzfernbedienung

|  |                  |   |               |
|--|------------------|---|---------------|
|  | Audio            |   | Dual          |
|  | Theater Position |   | Options       |
|  | 3D Phonic        |   | 3D            |
|  | Digest           |   | Text          |
|  | Angle            |   | Format        |
|  | Zoom             | + | Shift + Eject |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |
|  |                  |   |               |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

