



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	--:--		Shift + Guide / EPG / -/--
	TV / VCR		AV / Input / RDS
	1		1
	2		2
	3		3
	Re-View		Back / Return
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Timer		Sleep / Timer
	X / 0000		Exit / Cancel / Clear
	0		0
	-/--		Guide / EPG / -/--





















**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Prog.		TV/Radio /
	Timer ?		Shift + Sleep / Timer
	30 Sec >>		Shift + >> /
	OK / Enter /		OK
	Start Debut +		Shift + Up
	Stop Fin +		Shift + Right
	Date +		Shift + CH+ /
	Start Debut -		Shift + Down
	Stop Fin -		Shift + Left
	Date -		Shift + CH- /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	Up / TV PR +		CH+ / Page+
	Up / TV PR +		Up
	Left / TV Vol - / I<<		Left
	Left / TV Vol - / I<<		I<< / Preset-
	Left / TV Vol - / I<<		Vol-
	Right / TV Vol + / >>I		Right
	Right / TV Vol + / >>I		>>I / Preset+
	Right / TV Vol + / >>I		Vol+
	Down / TV PR -		Down
	Down / TV PR -		CH- / Page-

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Audio Mute		Mute / Dimmer
	TV / VCR		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Timer		Sleep / Timer
	X / 0000		Exit / Cancel / Clear
	0		0
	-/--		Guide / EPG / -/--
	Prog -		CH- / Page-

**Originalfernbedienung Ersatzfernbedienung**

	Prog -		Down
	Prog +		CH+ / Page+
	Prog +		Up
	Vol -		Vol-
	Vol -		Left
	Vol +		Vol+
	Vol +		Right

