 















 



 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	Standard		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	AV		AV / Input / RDS
	P+		CH+ / Page+
	Up		Up
	Down		Down
	Menu		Menu / Home
	Left		Left
	Vol-		Vol-
	Right		Right
	Vol+		Vol+
	P-		CH- / Page-
	Hold		Shift + Stop /
	[?]		Picture / Format
	[♦]		Zoom / Size
	[≡]		Text / Goto
	Timer		Sleep / Timer
	[X]		D.Menu / Top



