




































Originalfernbedienung Ersatzfernbedienung

|   |             |   |                           |
|---|-------------|---|---------------------------|
|    | VCR         |    | Shift + 4                 |
|    | DVD         |    | Shift + 2                 |
|    | Power       |    | Power                     |
|    | DVD Menu    |    | D.Menu / Top              |
|    | Memory      |    | Text / Goto               |
|    | Return      |    | Back / Return             |
|    | Open/Close  |    | Eject / Surround          |
|    | Display     |    | Shift + Display / Media   |
|    | Subtitle    |    | Subtitle / EQ             |
|    | Angle       |    | Info / Angle              |
|   | Zero Return |   | Shift + Back / Return     |
|  | Play Mode   |  | Smart / List              |
|  | Zoom        |  | Zoom / Size               |
|  | Title       |  | Sound / Title             |
|  | Repeat A-B  |  | Yellow / YouTube / Repeat |
|  | 1           |  | 1                         |
|  | 2           |  | 2                         |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |                  |
|---|-----------|---|------------------|
|    | 3         |    | 3                |
|    | [1]/Prog. |    | TV/Radio /       |
|    | 4         |    | 4                |
|    | 5         |    | 5                |
|    | 6         |    | 6                |
|    | [4]/Timer |    | Sleep / Timer    |
|    | 7         |    | 7                |
|    | 8         |    | 8                |
|    | 9         |    | 9                |
|    | Tv Vol+   |    | Vol+             |
|   | 0/AUX     |   | Shift + 7        |
|  | 0/AUX     |  | 0                |
|  | Tv/VCR    |  | AV / Input / RDS |
|  | Tv Vol-   |  | Vol-             |
|  | <</[<<]   |  | << / Tune-       |
|  | Play      |  | Play / Slow      |
|  | >>/[>>]   |  | >> / Tune+       |



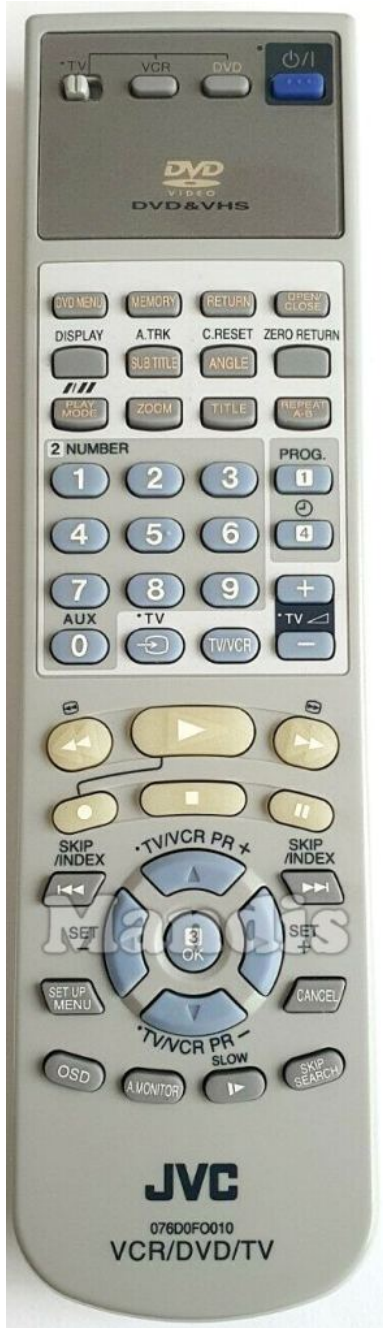

Originalfernbedienung Ersatzfernbedienung

|  |                |  |                        |
|--|----------------|--|------------------------|
|  | Stop           |  | Stop / Hold            |
|  | Pause          |  | Pause / Step / Freeze  |
|  | I<< Skip/Index |  | I<< / Preset-          |
|  | Up             |  | Up                     |
|  | >>I Skip/Index |  | >>I / Preset+          |
|  | Left           |  | Left                   |
|  | OK             |  | OK                     |
|  | Right          |  | Right                  |
|  | Set Up Menu    |  | Setup / OPT /          |
|  | Down           |  | Down                   |
|  | Cancel         |  | Exit / Cancel / Clear  |
|  | OSD            |  | Display / Media        |
|  | A. Monitor     |  | Menu / Home            |
|  | I> Slow        |  | Shift + Play /         |
|  | Skip Search    |  | Red / Netflix / Search |
|  |                |  |                        |
|  |                |  |                        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

