







 



 










 
 




 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV
	Red / Zoom		Red
	Red / Zoom		Eject
	Green / Audio		Green
	Green / Audio		Dual

**Originalfernbedienung Ersatzfernbedienung**

	Yellow		Yellow
	Blue		Blue
	i		Info
	Text		Text
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Vol +
	Right / Vol+		Right
	Left / Vol-		Vol -
	Left / Vol-		Left
	Menu / OK		Menu
	Menu / OK		Ok
	[[ ]]		Stop
	F.T/L		Smart
	[?]		Media







