 





 
 
 



 





 
 

 







 

 


 

 
 

 
 
 
 
 
 


 
 
 
 
 



 






 
 


 
 




Originalfernbedienung Ersatzfernbedienung

	MUTE		Mute
	POWER		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TEXT		Text
	HOLD		Shift + Stop
	SUBPAGE		Subt
	FAV		Pre Ch
	AUDIO		Dual

Originalfernbedienung Ersatzfernbedienung

	MENU		Menu
	UP		Up
	INPUT		AV
	LEFT		Left
	OK		Ok
	RIGHT		Right
	BACK		Back
	DOWN		Down
	EXIT		Exit
	VOL+		Vol +
	SLEEP		Sleep
	CH+		Ch +
	VOL-		Vol -
	CH-		Ch -
	RED		Red
	GREEN		Green
	YELLOW		Yellow



